

SR540 Operating Instructions

Before Using: Wipe glass with damp cloth, inside and out. Do not immerse roasting chamber in water.

CAUTION: To reduce the risk of electrical shock, do not immerse roaster base, its power cord or plug in water or other liquid.

Roasting Coffee Beans:

Your Fresh Roast SR540 coffee bean roaster is designed to roast approximately 4 ounces 114 Grams.

Fill the provided 43CC measuring cup 4 times. Never overfill with green beans.

Securely lock the glass roasting chamber on the base unit.

Place chaff collector on top of the glass roasting chamber.

Plug in the SR540 Coffee Roaster.

The standby mode will show “-----” on the display.

Press “ON/OFF” button, display shows the factory setting (for the first time use) or the last machine setting.

Factory setting is **FAN 9 HEAT 5 and TIMER 6.**

Press “RUN/COOL” button to start running the machine.

To make an adjustment during the roast, PRESS “ADJUST” button, the digit for FAN, POWER, and TIMER flashes in the sequence.

Select the parameter for adjustment.

Rotate the “ADJUST” button to the desired value. Rotating clockwise to increase the value and counter-clockwise to decrease value.

When the desired darkness of roast is achieved, PRESS the “RUN/COOL” button once.

*In the COOL mode, user can press “ADJUST” button to set the fan speed.

*Do not remove the Chaff Basket or Chamber until the machine has finished the COOL cycle and has shut off.

* User can exit the cool mode and enter into the roasting process by increasing the timer.

To stop the machine without a Cool cycle, press the “ON/OFF” button.

Real Time Temperature Display:

At any time in the roasting process, user can rotate “ADJUST” button quickly over 90 degrees to show the temperature in the display.

The display shows temperature in (F).

It will continue to show the temperature until you press the “ADJUST” button.

SR540 Operating Instructions

Before Using: Wipe glass with damp cloth, inside and out. Do not immerse roasting chamber in water.

CAUTION: To reduce the risk of electrical shock, do not immerse roaster base, its power cord or plug in water or other liquid.

Roasting Coffee Beans:

Your Fresh Roast SR540 coffee bean roaster is designed to roast approximately 4 ounces 114 Grams.

Fill the provided 43CC measuring cup 4 times. Never overfill with green beans.

Securely lock the glass roasting chamber on the base unit.

Place chaff collector on top of the glass roasting chamber.

Plug in the SR540 Coffee Roaster.

The standby mode will show “-----” on the display.

Press “ON/OFF” button, display shows the factory setting (for the first time use) or the last machine setting.

Factory setting is **FAN 9 HEAT 5 and TIMER 6.**

Press “RUN/COOL” button to start running the machine.

To make an adjustment during the roast, PRESS “ADJUST” button, the digit for FAN, POWER, and TIMER flashes in the sequence.

Select the parameter for adjustment.

Rotate the “ADJUST” button to the desired value. Rotating clockwise to increase the value and counter-clockwise to decrease value.

When the desired darkness of roast is achieved, PRESS the “RUN/COOL” button once.

*In the COOL mode, user can press “ADJUST” button to set the fan speed.

*Do not remove the Chaff Basket or Chamber until the machine has finished the COOL cycle and has shut off.

* User can exit the cool mode and enter into the roasting process by increasing the timer.

To stop the machine without a Cool cycle, press the “ON/OFF” button.

Real Time Temperature Display:

At any time in the roasting process, user can rotate “ADJUST” button quickly over 90 degrees to show the temperature in the display.

The display shows temperature in (F).

It will continue to show the temperature until you press the “ADJUST” button.

Reset Factory Default Settings:

Plug machine into an outlet.

Press “On/Off” button.

Press “ADJUST” button to set FAN, POWER, and TIME.

Press “Run/Cool” button to save new default setting.

*Default settings are only for start up and will need to be adjusted during roast.

Cleaning and Care:

Before every use, always empty the Chaff* Basket and clean the Top Cap screen.

*Chaff is the outer layer husk of the coffee bean.